## Powerdot 1







**x1** 




**x1** 






INSERT Insert grommet into the hole, then feed the plug all the through the threaded fastening nut.

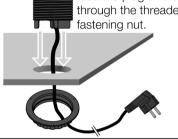


TURN CLOCKWISE & PLUG IN

Turn the fastening nut as far up the thread as possible. Make sure that it has been thoroughly tightened. Plug the French plug into a wall socket or powerstrip of your choice. Lastly, connect the

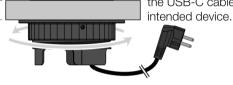

Note! The fastening nut has 3 holes for fixing with wood screws.

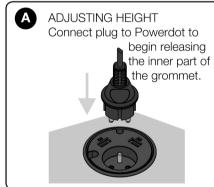

RELEASE INNER PART
Rotate plug counter-clockwise
to release the innert part.



ADJUSTING HEIGHT

30 mm maximum

 
The inner part should now be loose. Adjust to desired level - see box: ADJUST LEVELS




**Note!** Pay attention to the locking geometry as it will help with adjusting the inner part to the desired level.








2 **feed-throughs** (Ø7, Ø9.5 mm)

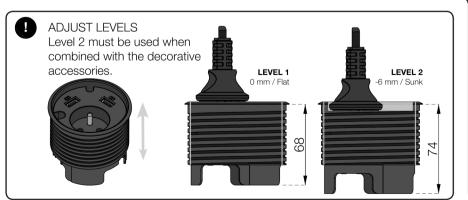

LOCKING POSITION
Rotate clockwise.

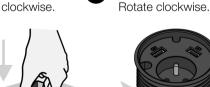





LOCKING POSITION