

# Powerdot MINI

## ERGO-SL012MI

- A** - Installation into round hole
- B** - Installation into tailored hole

### CONTENT:




x1




x1

- 1A** DRILL  
Drill a hole in the table.

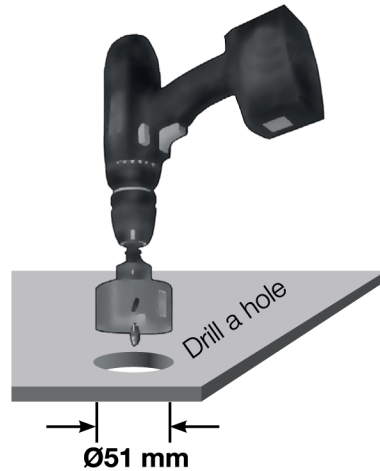


Ø51

- 2A** INSERT  
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

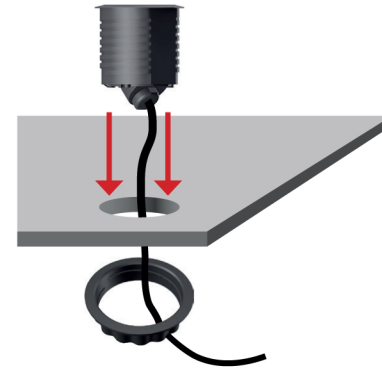

- 3A** TURN CLOCKWISE & PLUG IN  
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

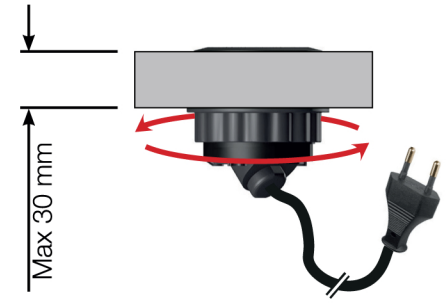


- 2 USB CHARGER Ports (5V, 2.4A)


- 1.5 meter cable



- 1B** MILL  
Mill a hole in the table.

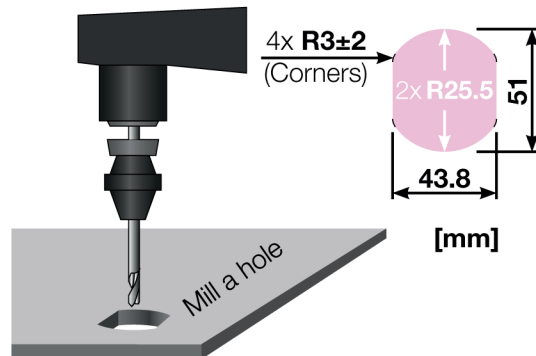

- 2B** INSERT  
Insert Powerdot into the hole and feed the power plug through the plastic fastening bolt.

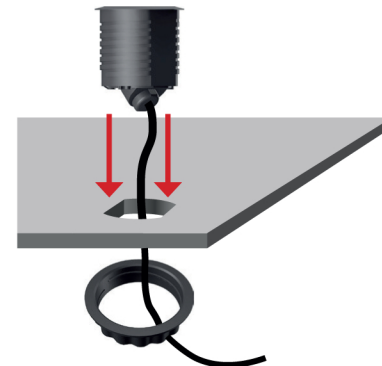

- 3B** TURN CLOCKWISE & PLUG IN  
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

