


User Manual


Before assembly please spend some time reading this and follow the procedures step by step. Some panels are viewed differently from the detail drawing below. This is for extra clarity. Do not discard any of the packaging until you have checked all the parts and tools. If you are missing any of the parts, please contact your supplier.

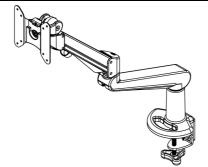

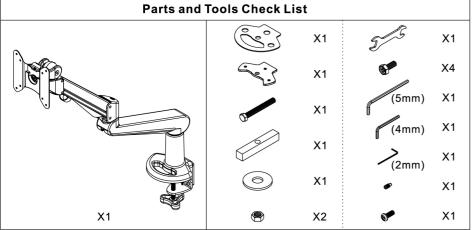

Upper Attachment Position

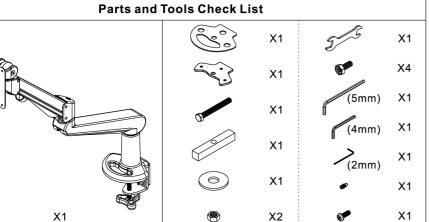


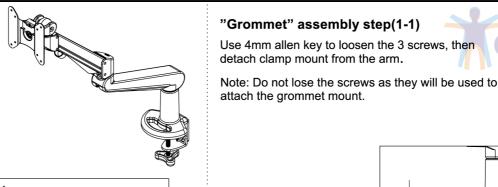


"Grommet" assembly step(1-2)

Place the small metal grommet mount plate on the bottom of the arm, then adhere the pad to protect the surface of the desk. Attach the arm to the desk by positioning over the grommet hole. The bolt should be visible under the desk. Secure the arm using the remaining parts as shown below. Grommet hole diameter should be between 20 - 50 mm.

~1.4" (36mm)

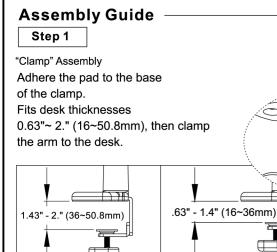

Lower Attachment Position

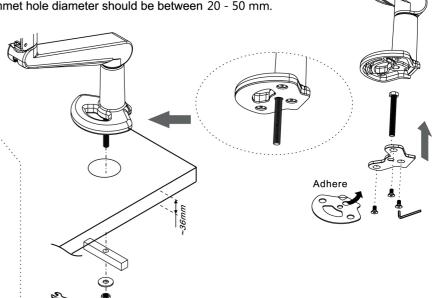

ERGO-MA003

